



Outdoor  
Patio Furnishings

# Assembly Instructions

## SeaAir Chaise Lounge


**Tools Needed:** hammer, 7/16" wrench, #2 square bit screw driver or power driver, punch  
No drilling is required. All the necessary holes are predrilled. Bolts fit snugly in the holes. You may need to use a hammer to drive the bolts through the holes.

**Hardware List Without Arms:** twenty 1¾" screws, two 3" lags with two washers each

**Hardware List With Arms:** twenty 1¾" screws, four 3" lags with two washers each, two 2½" bolts each with two washers and a lock nut.





### Parts

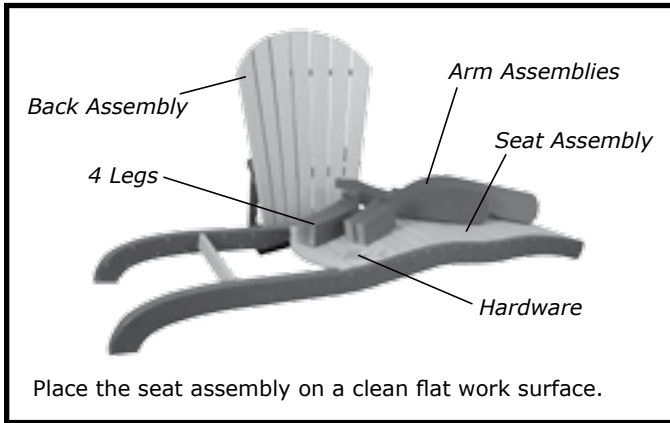

Place the seat assembly on a clean flat work surface.

### Step 3 – Attach Arms

Washers, Lags, Arms

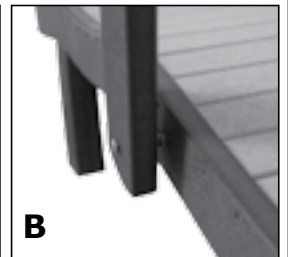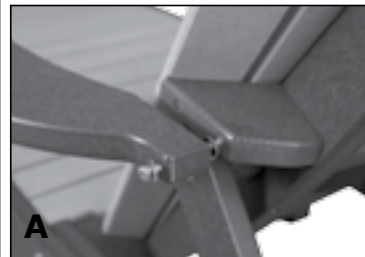

**A.** Place a washer on the lag. Place the lag in the pilot hole in the back of the arm. Place another washer on the lag. Repeat for the other side. Place the arm assemblies and tighten the lags securely.

**B.** Fasten the bottom of the arm assembly to the seat rail with bolt and lock nut. Place washers on either side of the bolts in the arm bracket (as on lags).

### Step 1 – Attach Legs to Seat


Screws, Seat Assembly, Legs



Align the pilot holes in the legs with the pilot holes in the rail of the seat assembly. Place five screws per leg.

### Step 2 – Attach Back to the Seat

Washers, Lags, Back Assembly

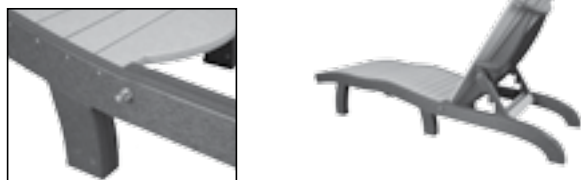

Place a washer on the lag. Place the lag in the pilot hole in the seat rail. Place another washer on the lag. Repeat for the other side. Place the back assembly and tighten the lags securely.

Congratulations!  
Your SeaAir Chaise lounge is ready to enjoy!

