

Flat Ridge Furniture Sewing Lifts Instructions

***** VERY IMPORTANT *****

The *Lifts* are **NOT** preset to the customer's sewing machine. The CUSTOMER HAS TO SET THE *LIFT* TO THEIR OWN SEWING MACHINE'S STANDARDS . **The First Thing to do is:** PUT THE SEWING MACHINE ON THE *LIFT* TO SET THE PERMANENT POSITION. It is done by sliding up & down the little black block (that has notches/channels on it) that is fastened to the stem of the lift. (An 8 mm wrench is needed to do this.)

To activate sewing machine lift: Push down a little approx. 1/4" - 1/2" to release it, then you can go up or down depending in which position it is. The center block can be bypassed on the way down, but not on way up.

"Sewing Machine Lift" has the following 3 Notch Positions:


1) Stop for the free arm

(if the customer has a free arm sewing machine, the lift raises the machine enough to sew using the free arm) Sewing Machine shelf should be flush with top of cabinet (usually preset from builder)





2) Stop for the Flatbed

machine is flat with the cabinet (lowers the machine 2" - 3" or more depending on machine) Here is where you use your plastic insert.

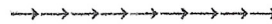

3) Stop for the Storage

The machine lowers all the way down for complete storage. If your machine doesn't go down far enough, try sliding the black block down further.

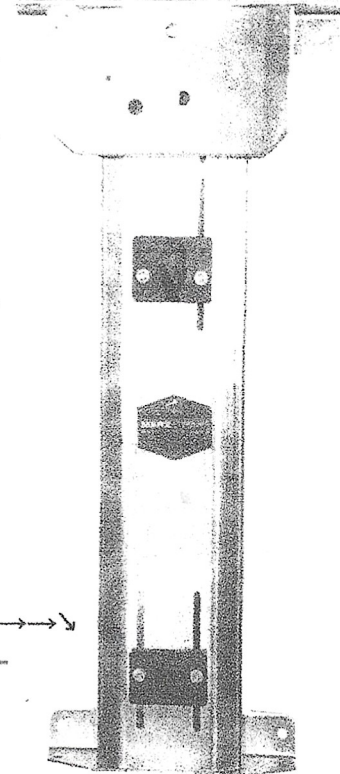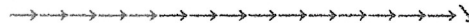

HOW TO USE THE "RIGHT DOOR/SERGER LIFT" PULL OUT

***** VERY IMPORTANT *****

Pull out, forward, and up until you hear a click signifying that it is latched.

To put it down: With a hand underneath on each lever pull the levers forward to release and push down. It should almost go down by itself.

Following the recommended spring position for varying mixer/serger weights shown at side, adjust the spring by using a 10 mm boxed in wrench to remove the set bolt while releasing the spring tension on the tension adjustment lever. Do this by placing the box end of a 14 mm boxed in wrench over the end of the tension adjustment lever and pulling toward the front of the cabinet.

WARNING: SPRING IS UNDER HIGH TENSION!


Do not release the tension until the set bolt is in the desired location and firmly secured. Repeat with the other side.

PLEASE NOTE: If your serger weighs less than 16#, try it before changing the spring position, it might still be okay.

After it is finished the casters need to be cleaned, so they don't make marks on the floor.

Serger Lift:

Due to the nature of this lift, 100% square to the cabinet can not be guaranteed.

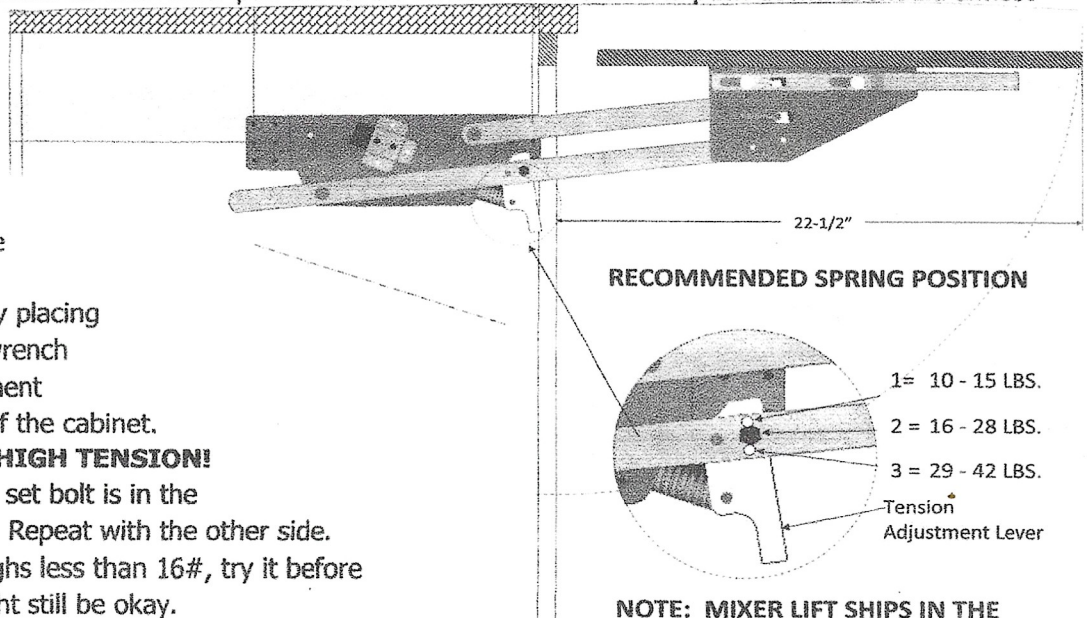

RECOMMENDED SPRING POSITION

- 1 = 10 - 15 LBS.
- 2 = 16 - 28 LBS.
- 3 = 29 - 42 LBS.

Tension Adjustment Lever

NOTE: MIXER LIFT SHIPS IN THE SECOND POSITION

**Flat Ridge Furniture
4500 TR 119**

**Millersburg, OH 44654
V.M. 330-893-3474**