


Assembly Directions for Adirondack Footstool

#PAFS2400

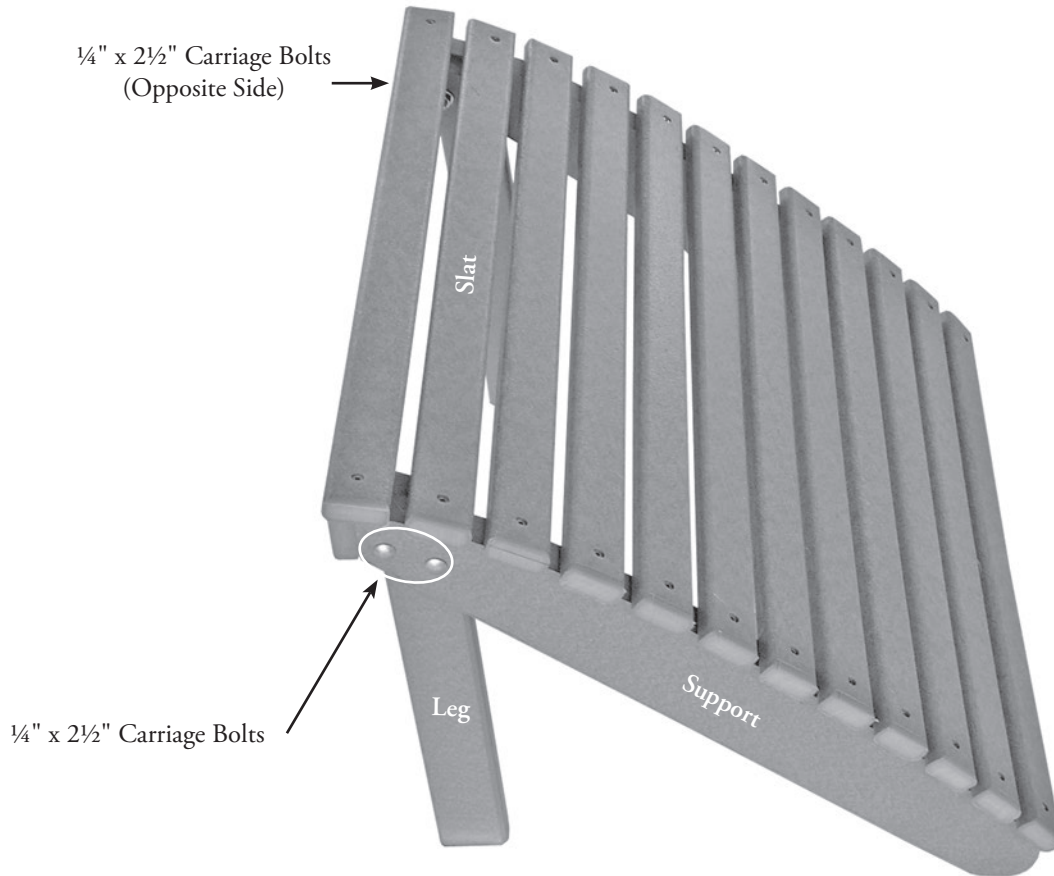

PACKAGE CONTENT


- 1 Footstool
- 2 Legs
- 1 Hardware Package

HARDWARE PACKAGE

- 4 1/4" x 2 1/2" Carriage Bolts
- 4 1/4" Flange Nuts

TOOLS NEEDED:

Hammer & 7/16" Wrench



Use to measure bolts

