

WEST CHESTER ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA








#410 & 416 4' Swings Wood

West Chester & Curve Back Swings

Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16 & 9/16 Socket or 7/16 or 9/16 Wrench

Included Hardware

A		2	1/4" x 2" Carriage Bolt
B		4	1/4" x 2 3/4" Carriage Bolt
C		2	1/4" x 3 1/4" Carriage Bolt
D		8	1/4" Nut
E		2	4" Eye Bolt
F		2	5" Eye Bolt
G		4	3/8" Nuts

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. (Illustration 2)
3. Set the back into the seat. Align the pre-drilled holes. Fasten the back to the seat using 2 (B) 1/4" x 2 3/4" Carriage Bolts and 2 (D) 1/4" Nuts. (Illustration 2) Repeat on the other side.
4. Now fasten the arm and leg combo. Fasten the arm using 1 (C) 1/4" x 3 1/4" Carriage Bolt and 1 (D) 1/4" Nut. Then fasten the leg with 1 (F) 5" Eye Bolt & 1 (G) 3/8" Nut. (Illustration 3) Repeat on the other side.
5. Then fasten 1 (E) 4" Eye Bolt & 1 (G) 3/8" Nut to the side of the back. (Illustration 4) Repeat on the other side.

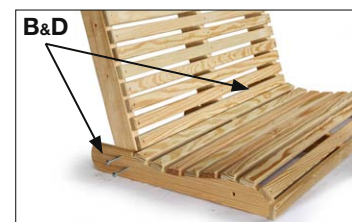


Illustration 2



Illustration 3

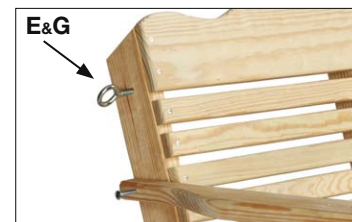


Illustration 4