

HIGH BACK HEART ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#402 4' High Back Heart Glider



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		12	1/4" x 2 3/4" Carriage Bolt
B		10	1/4" x 3 1/2" Carriage Bolt
C		22	1/4" Nut
D		8	3" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you find on the pieces.
2. To begin, set the seat upright. (Illustration 2)
3. Set the back into the seat. Align the pre-drilled holes. Using 2 (A) 1/4" x 2 3/4" Carriage Bolts & 2 (C) 1/4" Nuts fasten the back on the seat on the left side. (Illustration 2) Repeat on the other side.
4. Fasten the arm and leg combo using 5 (B) 1/4" x 3 1/2" Carriage Bolts & 5 (C) 1/4" Nuts. (Illustration 3) Repeat on the other side.
5. Now put the base together by adding the braces. Fasten them by using 8 (A) 1/4" x 2 3/4" Carriage Bolts & 8 (C) 1/4" Nuts. (Illustration 4)
6. Fasten the frame to the base using 4 (D) 3" Screws on each side. (Illustration 5) Repeat on the other side.

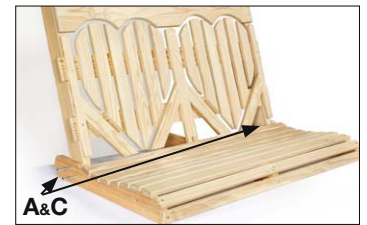


Illustration 2

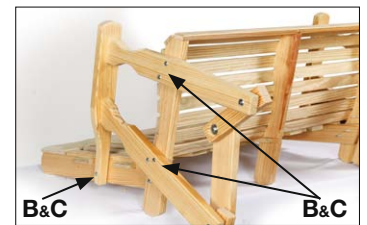


Illustration 3

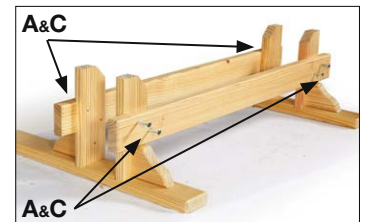


Illustration 4



Illustration 5