

ENGLISH GARDEN ASSEMBLY INSTRUCTIONS



#71A, 71B & 71C Dining Tables

English Garden

(717) 354-8998 • (877) 560-5966
New Holland, PA



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or
7/16 wrench

Included Hardware

71A (43" x 43") & 71B (43" x 72")

A 20 2" Screws

B 20 2½" Screws

71C (43" x 96")

A 38 2" Screws

B 24 2½" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. With the leg assembly laying flat, fasten the brace assembly to the leg assembly using 4 (B) 2½" Screws. Use two screws on each side. (Illustration 2) **Larger tables have 3 leg assemblies and 2 brace assemblies.*
3. Then fasten the other leg assemblies to the brace using 2 (B) 2½" Screws. Use two screws on each side. (Illustration 3)
4. Set the leg assemblies upright. Lay the table top upside down and prepare to fasten the leg assemblies. Center the leg assembly on either side of the aluminum rails on the bottom of the table top. Fasten the legs of the leg assemblies using the pre-drilled holes using 2 (B) 2½" Screws. Repeat on the remaining 3 legs. (Illustration 4)
5. Then fasten the skirt board to the table top and leg assembly. Fasten the ends to the table top using 2 (A) 2" Screws. Then fasten the skirt board to the leg assembly using 4 (A) 2" Screws. (Illustration 5) Repeat on the other side.
6. Now add the two braces that go between the table top and leg assembly. Fasten the brace to the leg assembly using 2 (B) 2½" Screws. Then fasten the brace to the table top using 2 (B) 2½" Screws. (Illustration 6) Repeat on the remaining 3 braces.
7. For larger tables with a center leg, screw the umbrella holder in the center of the brace assembly using 4 (A) 2" Screws. (Illustration 7)

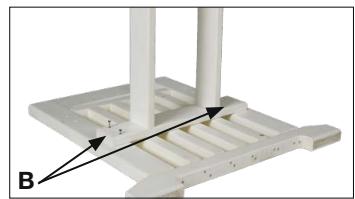


Illustration 2

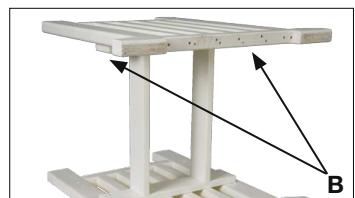


Illustration 3

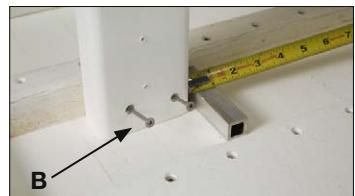


Illustration 4



Illustration 5

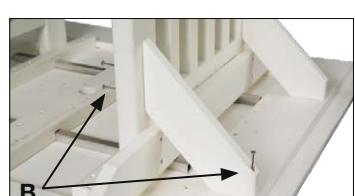


Illustration 6

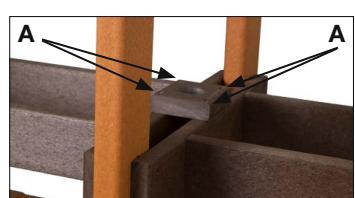


Illustration 7