


Step 2 (Bar Height Only)

Lay the chair on its side on a soft surface. Set the tenons of the Back Leg Cross Piece into the mortises located in the back legs. Fasten using four – 2" Pandeck Screws.

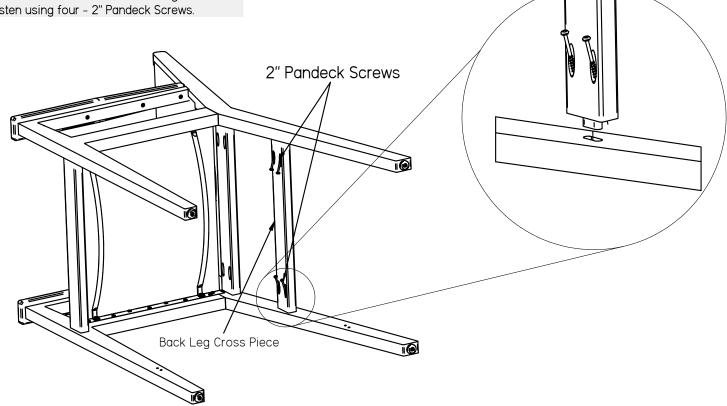

Step 3

Place the Footrest Assembly between the chair legs. Align the predrilled holes of the footrest with the predrilled holes in the chair legs. Using the 5/32 Allen Drive Bit, fasten it using 8 - 1/4" x 2" Lags. You may need to reverse your drill several times before you are able to drive the lags in completely.

